

Design Tools


Faults & Protection



5. Faults & Protection

Level and Behavior of OTP, OCP, OVP, UVP and UVLO

Use this tool to set Vout UVP/OVP, Vin OVP/UVP, OTP, OCP, and Vaux UV faults threshold. Remember to press and **Apply** and **Ok** to program the settings.

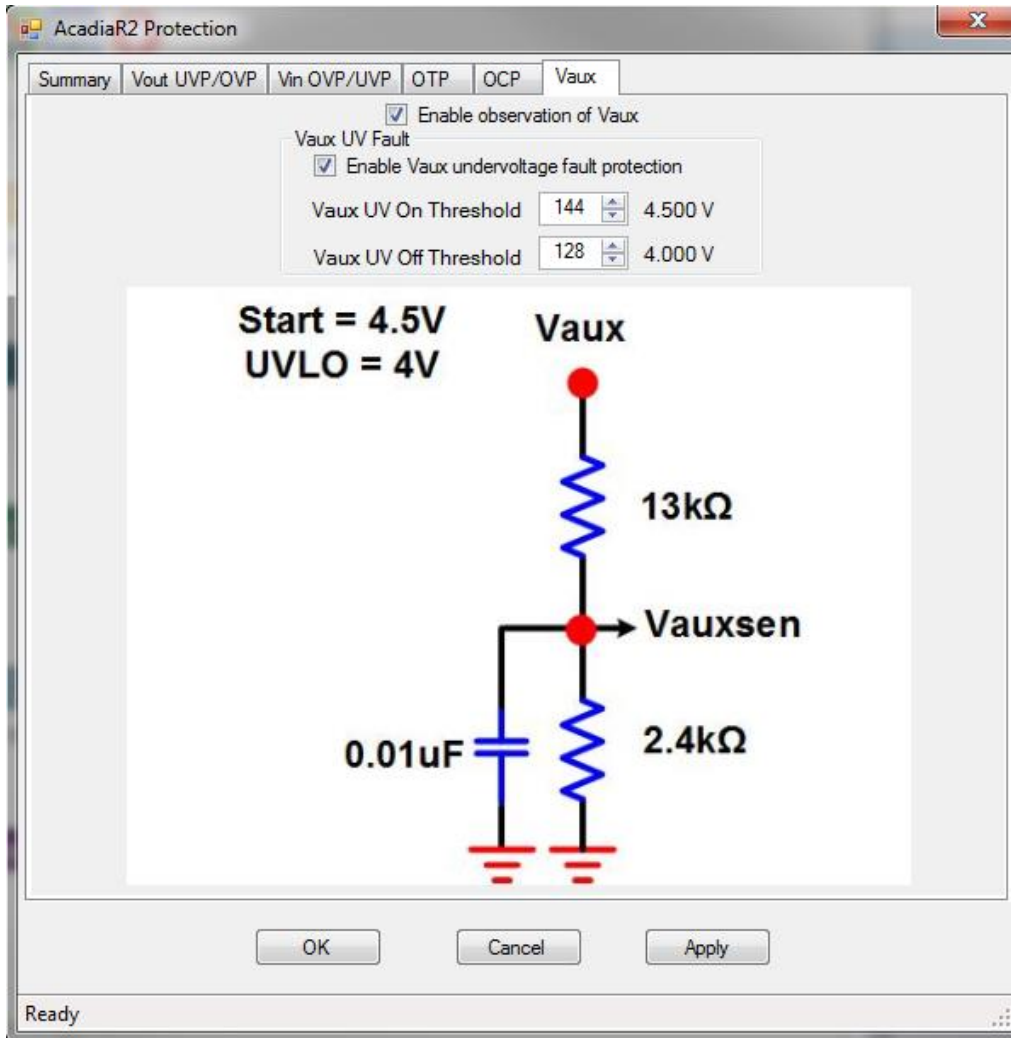

Vaux tab allows the use to enable Vaux monitor and Vaux under voltage fault protection.

The **Vaux UV On/Off Threshold** can be adjusted to the desired value. Vauxsen and monitoring is through a simple voltage divider circuit.