


Phase & Frequency...

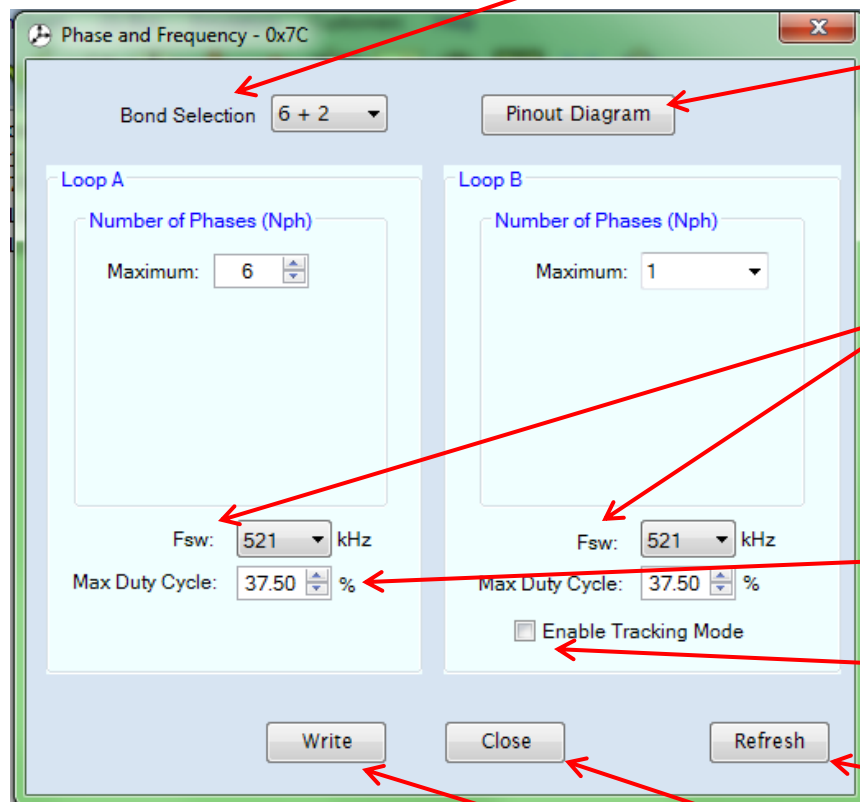

Bond Selection: Here the maximum number of phases can be selected. Depending on which partnumber there will be more or less combinations to select from.

After selection of phases the **Pinout Diagram** button can display what pins are assigned to which signal

Fsw: opens a menu with different switching frequencies to select from. Note that depending on number of phases in a loop available frequencies may differ slightly due to internal division ratios.

Max Duty cycle: Maximum dutycycle allowed for PWM signal

Enable Tracking mode: LoopB tracks loopA

Refresh Button: Restore the values entered to values before they got changed

Close button: close window without saving

Write button: save the settings